



SPEAKEASY BY Q™

SPECS:

|          |                      |
|----------|----------------------|
| CALIBER  | 7.62 mm              |
| MOUNT    | Quickie™ Fast-Attach |
| MATERIAL | Stainless Steel      |

|          |         |
|----------|---------|
| LENGTH   | 8.56 in |
| DIAMETER | 1.75 in |
| WEIGHT   | 16.3 oz |

CHERRY BOMB MUZZLE BRAKE BY Q™

SPECS:

|          |         |
|----------|---------|
| BORE     | 7.62 mm |
| MATERIAL | 17-4 SS |

|        |        |
|--------|--------|
| LENGTH | 2.3 in |
| WEIGHT | 3.2 oz |

MORE LAWYER SHIT:

- BEFORE USING THIS SILENCER: BE CERTAIN YOU HAVE READ AND UNDERSTAND THIS MANUAL AND THE ACCOMPANYING “FINE PRINT” SHEET. FAILURE TO DO SO CAN RESULT IN SERIOUS INJURY AND/OR PROPERTY DAMAGE. USE EXTREME CARE AND CAUTION WHEN HANDLING ANY FIREARM AND SILENCER.
- THE SPEAKEASY SILENCER IS FOR USE WITH 7.62 MM OR SMALLER PROJECTILES.
- ONLY USE FACTORY CERTIFIED SAAMI / C.I.P. AMMUNITION WITH THIS SILENCER.

CHERRY BOMB INSTALLATION:

- BEFORE PERFORMING ANY MAINTENANCE ON YOUR FIREARM, REMOVE THE MAGAZINE FROM YOUR FIREARM, MAKE SURE THE ACTION IS OPEN AND THE FIREARM IS UNLOADED BY PERFORMING A PHYSICAL AND VISUAL INSPECTION OF THE CHAMBER AND MAGAZINE WELL.
- AS WITH ALL FIREARMS CLEANING AND MAINTENANCE, ALWAYS WEAR PROPER PERSONAL PROTECTIVE EQUIPMENT SUCH AS GLOVES AND SAFETY GLASSES.


**DO NOT THREAD THE CHERRY BOMB INTO THE SILENCER BEFORE IT IS PROPERLY INSTALLED ONTO A BARREL. IT WILL GET STUCK.**

- 1.Remove any muzzle devices from your host firearm.
- 2.Clean & degrease muzzle threads with solvent.
3. If using a tapered shoulder, move on to step 4. If using square shoulder, apply Rocksett thread lock to the barrel threads.
- 4.Right tighty. Using a 1/2 inch SAE socket, tighten the CHERRY BOMB according to the below specs.



**PRO TIP: USE THE CORRECT CHERRY BOMB. WE OFFER THEM IN M18-1.5, 3/4-24, 5/8-24.**


- 5.Allow Rocksett to cure for 24 hours for best results.

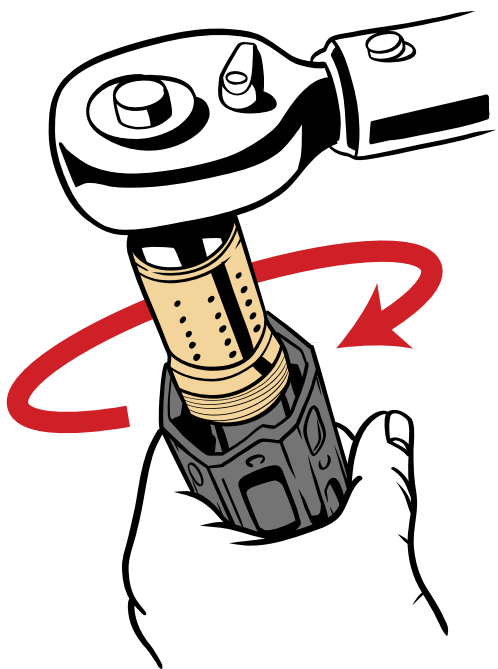

**DO NOT USE WASHERS, SHIMS, OR JAM NUTS WHEN INSTALLING THE CHERRY BOMB ONTO THE HOST BARREL. THEY CAN CAUSE MISALIGNMENT AND THE CHERRY BOMB DOES NOT REQUIRE TIMING.**

ASSEMBLY:


- Well, that was easy.

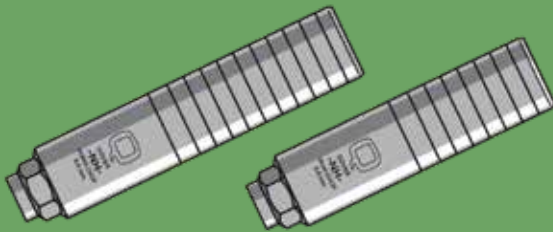

SILENCER INSTALLATION:

- 1.Righty tighty. The SPEAKEASY silencer features 1 in SAE wrench flats on the rear. We recommend you use these for install and removal.
- 2.Torque clockwise onto the Cherry Bomb to 10-15 ft lbs.


**DO NOT USE THREAD LOCK WHEN INSTALLING A QUICKIE FAST-ATTACH SILENCER TO THE CHERRY BOMB MUZZLE BRAKE.**

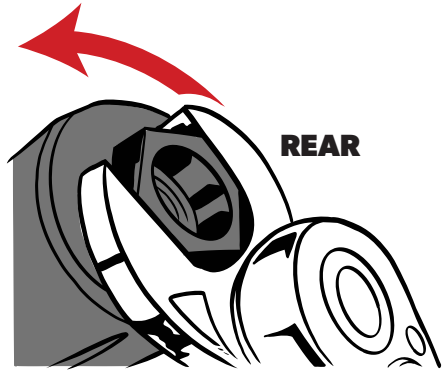

REMOVAL:

- BEFORE REMOVING ANY SILENCER FROM ITS HOST FIREARM, REMOVE THE MAGAZINE FROM THE FIREARM. MAKE SURE THE ACTION IS OPEN AND THE FIREARM IS UNLOADED BY PERFORMING A PHYSICAL AND VISUAL INSPECTION OF THE CHAMBER AND MAGAZINE WELL.
- IF YOU JUST FINISHED SHOOTING, I’D WAIT A MINUTE... THAT SHIT GETS HOT.

- 1.Lefty loosey.

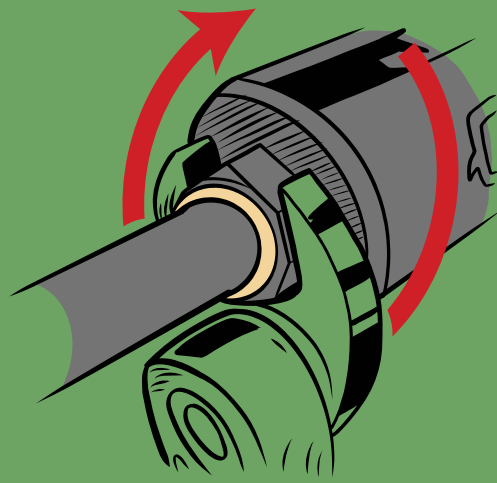

CLEANING & MAINTENANCE:

- CONTRARY TO WHAT THE INTERNET SAYS, A CENTERFIRE RIFLE SILENCER DOES NOT REQUIRE THE SAME CLEANING AND MAINTENANCE AS A RIMFIRE OR CENTERFIRE PISTOL SILENCER.
- AS WITH ALL FIREARMS CLEANING AND MAINTENANCE, ALWAYS WEAR PROPER PERSONAL PROTECTIVE EQUIPMENT SUCH AS GLOVES AND SAFETY GLASSES.

- 1.Clean the CHERRY BOMB’s taper and threads as well as the corresponding silencer features of any fouling. This will help with alignment of the silencer to the barrel’s axis, ensuring optimal performance.
- 2.If you wish to clean internals of the silencer, we recommend submerging it in a copper solvent or an ultra sonic cleaner.
3. When removed from it’s bath, rinse and make sure the silencer is fully drained before use.

**DO NOT USE STEEL TOOLS FOR CLEANING. WE RECOMMEND USING A PIECE OF SOLVENT MOISTENED SCOTCH-BRITE™ OR A BRASS OR NYLON BRUSH.**



**LIVE Q OR DIE**  
Q, LLC 110 Venture Dr. | Dover, NH 03820  
**MADE PROUDLY IN THE LIVE FREE OR DIE STATE**

**unpossible\_by\_q**  
**liveqordie.com**